


TORQUE WRENCH INSTRUCTION MANUAL

STANDARD

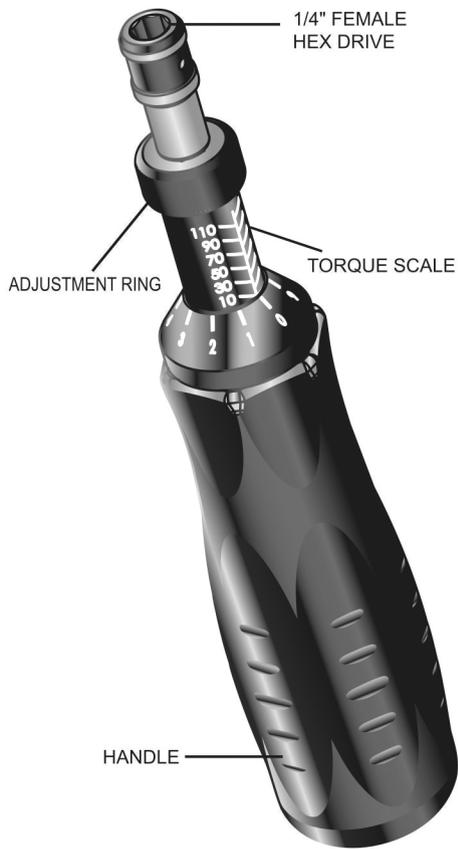

Each torque wrench is calibrated at the factory using torque standards according to DIN ISO 6789 & ASME B107.14M-2004, and is certified to meet the accuracy requirements of specifications DIN ISO 6789 and ASME B107.14M-2004.

VORTEX OPTICS

2120 West Greenview Dr.
Middleton, WI 53562


(800) 426-0048 x4

service@vortexoptics.com
www.vortexoptics.com



RAC-VT-CTW

OPERATION

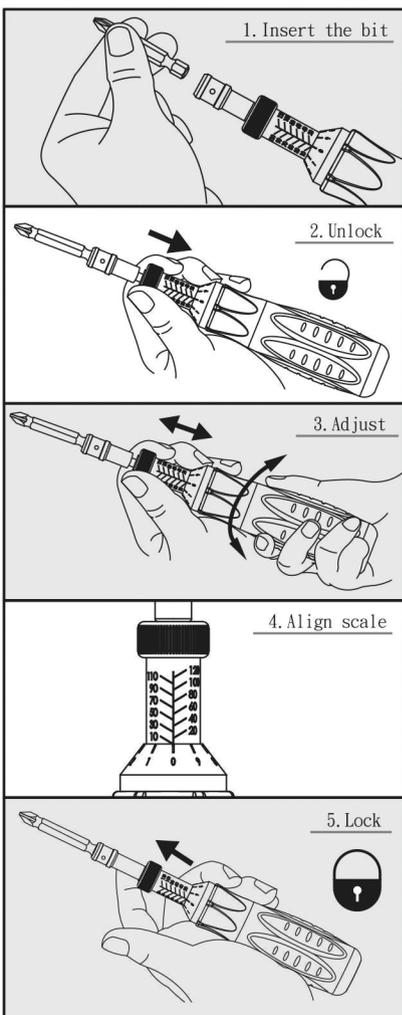

SAFETY INSTRUCTIONS

WARNING **THERE IS RISK OF FLYING PARTICLES**

- Using damaged hand tools, sockets, extensions or accessories may result in injury
- Do not hit anything with this torque wrench or use it as a hammer.
- An improperly calibrated torque wrench may cause damage to parts or tools.
- Do not use extensions on the handle as it will damage this torque wrench.
- To ensure accurate torque readings, please keep the torque wrench squared to the screw head.
- The handle is not insulated, do not use this torque wrench on live electrical or high voltage circuits.

 **ALWAYS USE EYE PROTECTION WHILE USING HAND TOOLS.**

 **INJURY MAY RESULT FROM ELECTRICAL SHOCK.**

CARE AND MAINTENANCE

1. This is a precision instrument and should be handled and stored with care. Don't throw it or use a hammer with it.
2. Your torque wrench is lubricated for life and you should not add any oil or lubricants. The only exception is the ratchet head, which may be lubricated as needed for smooth operation.
3. As with all precision measuring instruments, you must calibrate this torque wrench to ensure its accuracy. Once a year is sufficient under normal circumstances.
4. Always store this torque wrench in its box to avoid dirt and humidity.
5. Never disassemble the torque wrench by yourself. Should it need service, please contact us at:

Vortex Optics
2120 West Greenview Dr.
Middleton, WI 53562
Phone: (800) 426-0048 x4
Email: service@vortexoptics.com